

XR530C

Contents

1. GENERAL WARNING	1
2. General description	1
3. Controlling loads	1
4. Control panel commands	1
5. Function and parameters' programming Menu	1
6. list of Parameters	2
7. Digital inputs	3
8. Installation and mounting	3
9. Electrical connections	3
10. REMOTE DISPLAY XR REP	3
11. ALARM SIGNALS	3
12. serial output rs485	3
13. SELF DIAGNOSIS	3
14. TECHNICAL data	4
15. CONNECTIONS	4
16. default setting values - STANDARD MODELS	4

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

1.2 SAFETY PRECAUTIONS


- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "SAE s.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

2. GENERAL DESCRIPTION

Each model in the XR500 series is fitted with a Real Time Clock which allows programming of up to six daily defrost cycles, divided into holidays and working days. A "Day and Night" function with two different set points is fitted for energy saving. Due to the RS485 serial output all models can be integrated with a monitoring or supervising system.

XR530C, 32x74 format, is a microprocessor based controllers suitable for applications on normal or low temperature refrigerating units. It is provided with two relay outputs, one for the compressor, the other for the defrost. Alarm conditions are also signalled by a buzzer.

3. CONTROLLING LOADS

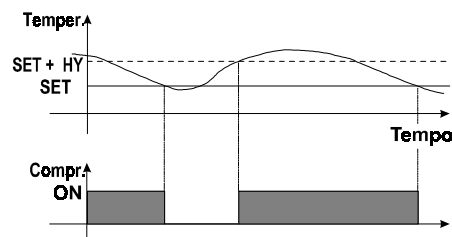

3.1 THE COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.

In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters "CO_n" and "CO_F".

3.2 FAST FREEZING CYCLE

When defrost is not in progress, fast freezing can be activated by the "UP" key by holding it pressed for about 3 seconds. The compressor operates in continuous mode for the time set through the "CC_t" parameter. The cycle can be terminated before the end of the set time using the same activation key.

3.3 DEFROST

Through the RTC parameters up to six daily defrosts (subdivided into holidays and working days) can be programmed. Two defrost modes are available through the "tdF" parameter: defrost through electrical heaters (tdF=0) and hot gas defrost (tdF=1). The defrost termination mode, parameter "EdF", can be either timed (EdF=0) or controlled by the evaporator probe (EdF=1 or EdF=2).

At the end of defrost the drip time starts - it is controlled through the "Fd_t" parameter.

EXTERNAL CONSENT FOR DEFROST END (PAR. DIC)

With diC=3, the digital input can control the end of defrost. This feature can be used in a plant with more than one evaporator when some of them are controlled by devices able to signal, by means of an external contact, that the defrost is in progress. When the temperature of defrost end is reached (par. EdF), the controller checks the state of the digital input; if it is ON, the drain time starts (par. Fd_t) and the normal regulation is stopped. When the digital input is switched off, the controller re-starts the normal regulation. In any case the normal regulation re-starts when the maximum length for defrost (par. MdF) is expired.

3.4 ENERGY SAVING

The Energy Saving function allows an operating set point which is higher than the usual set point. This function was developed for energy saving and can be set through parameters "ILE" and "dLE" for 'working days' cycle, "ISE" and "dSE" for 'weekends'.

NOTE: when the function is enabled the displayed temperature flashes.

4. CONTROL PANEL COMMANDS

SET: TO DISPLAY TARGET SET POINT: by pressing and releasing this key the set point is displayed for 5s.

TO MODIFY SET POINT: by holding the key pressed for at least 2s set point change mode is entered: the set point is displayed and the LEDs of the first and third digits blink. To change the value use the "UP" and "DOWN" keys. The new value can be stored either by pressing the "SET" key

(the instrument restores temperature display) or by waiting the exit time-out to expire (15s).

▲ (UP): in programming mode or in "Function Menu" it browses the parameter codes or increases the value of the displayed variable. Hold pressed for a faster change.

TO START A FAST FREEZING CYCLE: in normal operation, by holding it pressed for 3s the fast freezing cycle is started. Such cycle can be interrupted by holding the "UP" key pressed for 3s.

▼ (DOWN): in programming mode or in "Function Menu" it browses the parameter codes or decreases the value of the displayed variable. Hold pressed for a faster change.

❄ **TO START A MANUAL DEFROST:** by holding it pressed for 3s the defrost cycle is started


KEY COMBINATIONS:

▲+ ▼ **TO UNLOCK THE KEYBOARD:** when held pressed for 3s the keyboard is unlocked (see "LOC" function).

SET + ▼ **TO ENTER ON FUNCTION MENU:** when held pressed for 3s the Function Menu is entered.

SET + ▲ **TO RETURN TO THE ROOM TEMPERATURE DISPLAY:** programming end, return to the room temperature display.

4.1 USE OF LEDS

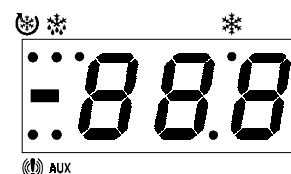

A series of light points on the front panels is used to monitor the loads controlled by the instrument. Each LED function is described in the following table.

LED	MODE	Function
❄	ON	Compressor enabled
❄	FLASHING	- Programming Phase (flashing with another led) - Anti-short cycle delay enabled
⚙	FLASHING	Programming Phase (flashing with ❄)
❄	ON	Defrost enabled
❄	FLASHING	Drip time in progress
⚙	ON	Fast freezing enabled
🔊	ON	- ALARM signal - In "Pr2" indicates the parameter is also present in "Pr1" or in "rtc"

5. FUNCTION AND PARAMETERS' PROGRAMMING MENU

5.1 FUNCTION MENU

Includes all the main functions controlled by the instrument.

Access procedure:

- The menu is entered by holding the SET and DOWN keys pressed for three seconds. The label of the first function is displayed.
- The UP and DOWN keys are used to cycle backwards or forward in the menu.
- By pressing the SET key the currently displayed function is enabled.

5.2 LIST OF FUNCTIONS

1. **"dFt"**: displays for 5s the time remaining to next defrost in hours & 10 min groups [hh.m]. (only in case of RTC fault)
2. **"Pt2"**: displays for 5s the temperature of the second probe.
3. **"Pr1"**: includes all user level accessible parameters.
4. **"Pr2"**: includes all the instrument's parameters (at installer level). It can be accessed through a security code. Hence it is possible to modify all parameters and add or remove parameters from "Pr1" (user level) by pressing **"SET"** + **"DOWN"**. In Pr2 when a parameter is enabled at user level, LED (LED) (Alarm LED) is on.
5. **"rTc"**: includes Real Time Clock parameters (user level).
6. **"dIG"**: a security code protected function allowing to choose whether digital inputs are activated by closing or opening the contact.
7. **"LbC"**: keyboard lock. When enabled the "POF" flashing message is displayed for a few seconds then the keys are locked. Only the set point display is enabled.
8. **"tSt"**: start the instrument self test.
9. **"ALr"**: displays any Alarm messages.
10. **"GUL"**: exits from menu

From functions "dFt" and "Pt2" you can exit by pressing SET or by time out. The instrument will go back to "Functions Menu". From all other functions the exit is by time out and the instrument will again display the room temperature.

5.3 EXIT TIMEOUT

If no key is pressed for more than 15 seconds the instrument reverts to room temperature display mode.

5.4 ACCESSING "Pr2" AND "dIG" AND SECURITY CODE INPUT

To access parameters in "Pr2" and "dIG" a security code is required.

1. Enter Function Menu, select label "Pr2" or "dIG" and press the **"SET"** key. The "PAS" flashing message is displayed, shortly followed by "0 -" with a flashing zero.
2. Use **"UP"** or **"DOWN"** to input the security code in the flashing digit;
3. Confirm the figure by pressing **"SET"**.
4. Repeat operations 2 and 3 for the other digits.
5. If the security code is correct the access to "Pr2" or "dIG" is enabled by pressing **"SET"** on the last digit, otherwise the security code input process restarts from the beginning.

If key is pressed for more than 15 seconds the instrument reverts to room temperature display mode.

SECURITY CODE is 321

NOTE: each parameter in "Pr2" can be removed or put into "Pr1" or "rtC" (user level) by pressing **"SET"** + **"DOWN"**. In Pr2 when a parameter is present in "Pr1" or "rtC" LED (LED) is on.

5.5 CHANGING PARAMETER VALUES

Each parameter is identified by a special alphanumeric code (label).

To change the parameter's value operate as follows:

1. Enter the **"Function Menu"** and select the parameters' list you require: Pr1, rtC, Pr2 or dIG.
2. Browse the parameters' list using **"UP"** or **"DOWN"** until the required parameter is displayed.
3. Press the **"SET"** key to display its value.
4. Use **"UP"** or **"DOWN"** to change its value.
5. Press **"SET"** to store the new value and skip to the following parameter.

TO EXIT: Press **"SET"** + **"UP"** or wait 15s without hitting a key.

NOTE: the set value is stored even when the procedure is exited by waiting the timeout to expire without pressing **"SET"**.

6. LIST OF PARAMETERS

- H9 Differential:** (maximum spread 50°C/90°F; resolution 1°C/°F or 0.1°C). Intervention differential for set point, always positive. Compressor Cut IN is Set Point Plus Differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.
- L5 Minimum set point:** (-50°C+SET / -50°F+SET); Sets the minimum value that can be input for the set point, to prevent the end user from setting incorrect temperature values.
- U5 Maximum set point:** (SET + 50°C / SET + 122°F). Set the maximum acceptable value for set point.
- AC Anti-short cycle delay:** (0÷30 min) minimum interval between the compressor stop and the following restart.
- OdS Outputs activation delay at start up:** (0÷30min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.
- ALC Set point alarms configuration:** (0= related to set point; 1=absolute) determines if temperature alarms are relative to set point or if alarms are referred to absolute temperatures.
- ALU MAXIMUM temperature alarm:** (when ALC =0 from 0 to 50 °C or from 0 to 90°F above the set point; when ALC = 1 from ALL to 50°C or from ALL to 122°F). When this temperature is reached the alarm is enabled, (possibly after the "Ald" delay time).
- ALL Minimum temperature alarm:** (when ALC = 0 from 0 to 50 °C or from 0 to 90°F below the set point; when ALC = 1 from -50 °C to ALU or from -58 °F to ALU). When this temperature is reached the alarm is enabled, (possibly after the "Ald" delay time).
- ALd Temperature alarm delay:** (0÷255 min) time interval between the detection of an alarm condition and alarm signalling.
- dRD Delay of temperature alarm at start-up:** (from 0 min to 23h 50 min) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.
- EdR Alarm delay at the end of defrost:** (0÷255 min) Time interval between the detection of the temperature alarm condition at the end of defrost and alarm signalling.
- CCt Compressor ON time during fast freeze:** (0÷24 hours) allows to set the length of the fast freezing. Can be used, for instance, when the room is filled with new products.
- dRF Defrost delay after fast freezing:** (0÷23 h 50 min) time interval between the end of the fast freezing and the following defrost related to it.
- ldF Interval between defrost cycles:** (1÷99 hours) Determines the time interval between the beginning of two defrost cycles. It is used in case of Real Time Clock fault.
- ndF Maximum length for defrost:** (0÷255 min); when EdF = 0 (timed defrost) it sets the defrost duration, when EdF = 1 or 2 (defrost termination based on temperature) it sets the maximum length for defrost.
- SdF Set point for SMARTFROST:** (-30÷30 °C/ -22÷86 °F) evaporator temperature which starts ldF counting (interval between defrosts) in SMARTFROST mode.
- dTE Defrost termination temperature:** (-50÷50 °C/ -58÷122 °F) Sets the temperature measured by the evaporator probe, which terminates the defrost.
- dFd Temperature displayed during defrost:** (0 = real temperature; 1 = temperature at defrost start; 2 = set point; 3 = "dEF" label)

dRd MAX display delay after defrost: (0÷255 min). Sets the maximum time between the end of defrost and the restarting of the real room temperature display.

EdF Defrost type: (0 = electrical heater, 1 = hot gas)

EdF Defrost mode:

EdF = 0 Time controlled defrost. The defrost lasts for the duration of time set in parameter MdF. On termination the drip down time starts (param. Fdt)

EdF = 1 Temperature controlled defrost. Defrost terminates when the evaporator reaches the temperature set in parameter dTE (defrost termination temperature).

NOTE: If at the start of defrost the evaporator temperature is higher than dTE then the defrost will be skipped.

EdF = 2 SMARTFROST mode. The time ldF (interval between defrosts) is increased when the compressor is running (even non consecutively) and the evaporator temperature is less than the value in "SdF" (set point for SMARTFROST). Defrost terminates on temperature.

Fdt Drip time: (0÷60 min) Time interval between reaching defrost termination temperature and the restoring of the controllers' normal operation. This time allows the evaporator to eliminate water drops that might have formed during defrost.

dPD First defrost after start-up: (0 = Immediately ; 1 = after the ldF time) Used in case of Real Time Clock fault only.

DE Thermostat probe calibration: (-30÷30°C, resolution 0.1 °C; or -54÷54 °F, resolution 1 °F) Permits calibration of the thermostat probe.

DE Evaporator probe calibration: (-30÷30°C, resolution 0.1 °C; or -54÷54 °F, resolution 1 °F) Permits calibration of the of the evaporator probe.

rES Resolution (for °C): (0 = 1°C; 1 = 0.1 °C) allows decimal point display.

CF Temperature measurement unit: 0 = Celsius; 1 = Fahrenheit.

COh Compressor ON time with faulty probe: (0÷255 min) time during which the compressor is active in case of faulty thermostat probe. With COh=0 compressor is always OFF.

COF Compressor OFF time with faulty probe: (0÷255min) time during which the compressor is off in case of faulty thermostat probe. With COF=0 compressor is always active.

dIC Digital input #1 operating mode: four operating modes can be selected:

0 = generic alarm: the buzzer and the alarm output are enabled, the flashing message "EA" is displayed, the other outputs are not modified;

1 = klixon alarm: the buzzer and the alarm output are enabled, the flashing message "CA" is displayed, the other outputs are set to OFF state;

2 = serious alarm mode: same as for Klixon alarm, but the flashing "OFF" message is displayed.

3 = external consent for defrost end: when the temperature of defrost end is reached (par. EdF), the controller checks the state of the digital input; if it is ON, the drain time starts (par. Fdt) and the normal regulation is stopped. When the digital input is switched off, the controller re-starts the normal regulation. In any case the normal regulation re-starts when the maximum length for defrost (par. MdF) is expired.

dId Digital input #1 delay: (0÷255 min) delay between the detection of the external alarm condition (input #1) and its signalling.

bBz Buzzer silencing: (0 = mute disabled, 1 = mute enabled).

Ad1, Ad2 RS485 serial address (0÷94): identifies the instrument within the control and supervising system XJ500.

Ptb Parameter table (read only) It shows the code of the map used in factory to set the parameters.

6.1 RTC (REAL TIME CLOCK) PARAMETERS

To disable a defrost cycle set it to zero. E. G. If Ld6=0.0 then the sixth defrost cycle is disabled

Ld 1..Ld5 Working days defrost start 1..6: (00.0 ÷ 24.0 ; resolution 10 min; 00.0 disabled the defrost). These parameters set the beginning of the six programmable defrost cycles during working days. Ex. When Ld2 = 12.4 the second defrost starts at 12.40 during working days (Monday...Saturday). NOTE: if the parameter is set to "00.0" the related defrost cycle is disable.

Sd 1..Sd5 Sundays defrost start 1..6: (00.0 ÷ 24.0 ; resolution 10 min; 00.0 disabled the defrost). These parameters set the beginning of the six programmable defrost cycles on Sundays. Ex. When Sd2 = 3.4 the second defrost starts at 3.40 on Sundays. NOTE: if the parameter is set to "00.0" the related defrost cycle is disable.

ILE Energy Saving cycle start during working days: (00.0 ÷ 24.0; resolution 10 min; 00.0 disabled the cycle). During the Energy Saving cycle the set point is increased by the value in HES so that the operation set point is SET + HES. Obviously the operation set point shall comply with the product preservation requirements. During the Energy Saving cycle the temperature display flashes.

dLE Energy Saving cycle length during working days: (0 ÷ 23; resolution 1 hour). Sets the duration of the Energy Saving cycle on working days.

I. E.: When ILE = 20.2 and dLE = 11 the Energy Saving cycle starts at 20.20 and ends at 7.20 (11 hours later) of the following morning on working days (from Monday to Friday).

ISE Energy Saving cycle start on Saturdays: (00.0 ÷ 24.0; resolution 10 min; 00.0 disabled the cycle). The Energy Saving cycle on Saturdays can last up to 72 hours. If the Energy Saving cycle on Saturday shall be automatically linked to the working days cycle, set "ISE" (starting time) to a time before the end of the working days Energy Saving cycle.

I. E.: ILE = 20.2 [20.20 P.M.] (Energy Saving cycle start during working days)

dLE = 11 [hours] (Energy Saving cycle length during working days)

ISE=06.0 [6.00 A. M.] (Energy Saving cycle start on Saturdays)

dSE=49 [49 hours] (Energy Saving cycle length on Saturdays)

The Energy Saving cycle starts at 20.20 and ends at 7.20 (11 hours later) of the following morning on working days (from Monday to Friday). On Saturday morning at 6 o'clock the Energy saving cycle of Saturday starts and lasts for 49 hours (until 7 a. m. of Monday).

dSE Energy Saving cycle length on Saturdays: (0 ÷ 72; resolution 1 hour)

HES Temperature increase during the Energy Saving cycle (0 ÷ 30°C or 0÷54 °F). Sets the increase of the set point during the Energy Saving cycle. If, for instance, SET = -20°C and HES = 2, the operation set point during the Energy Saving cycle will be SET = -18°C.

ddd Current day: (1 ÷ 7; resolution 1 day). When Monday = 1... Sunday = 7.

HHH Current hour: (0 ÷ 23; resolution 1 hour)

nnn Current minute: (0 ÷ 59; 1 minute)

7. DIGITAL INPUTS**7.1 FUNCTION "DLG"**

The "dlG" function is included in the Function Menu and protected by a security code. It allows to choose whether the digital inputs shall be active corresponding to normally closed or open circuit.

Once the function has been selected and the security code entered, the "lnx" label will be displayed, where x is the first digital input enabled for the instrument and

can vary from 1 to 4. The labels can be browsed using the "UP" and "DOWN" keys - to access the value press "SET". Values can be modified in the 0 ÷ 1 range:

0 = digital input is activated **by opening** the contact;

1 = digital input is activated **by closing** the contact.

Standard configuration: digital input is activated by closing the contact.

To exit: do not press any key for 15s.

The **XR530C** is fitted with 1 non-insulated digital input, which can be configured by means of "dlC" parameter.

8. INSTALLATION AND MOUNTING

The **XR530C** is a panel mounted model, in a 29x71 mm hole, and fixed using the special bracket supplied. The ambient temperature range allowed for correct operation is 0 ÷ 60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let air circulate by the cooling holes.

9. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2.5 mm². Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the input connection cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

9.1 PROBES CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters and from the warmest place during defrost, to prevent premature defrost termination.

10. REMOTE DISPLAY XR REP

The remote display XR REP can be connected to the instruments. The XR REP repeats the temperature shows by the controller.

11. ALARM SIGNALS

Message Mode	Cause	Outputs
"EE" Flashing	Data or memory failure	Alarm output ON; Other outputs unchanged
"P1" Flashing	Room probe failure	Alarm output ON; Compressor output according to parameters "CO _N " and "CO _F "
"P2" ¹ Alternating with room temperature	Evaporator probe failure	Alarm output ON; Other outputs unchanged; Defrost termination is timed
"rtC" Alternating with room temperature	Real Time Clock failure	Alarm output ON; Other outputs unchanged; Defrosts according to par. "ldF"
"HA" Alternating with room temperature	Maximum temperature alarm	Alarm output ON; Other outputs unchanged.
"LA" Alternating with room temperature	Minimum temperature alarm	Alarm output ON; Other outputs unchanged.
"FF" Alternating with room temperature	Fast freezing interrupted by power failure	Alarm output ON; Other outputs unchanged.

Message Mode	Cause	Outputs
"EA" Alternating with room temperature	External alarm	Alarm output ON; Other outputs unchanged.
"CA" Alternating with room temperature	Klixon alarm	Alarm output ON; Other outputs OFF.
"OFF" Alternating with room temperature	Serious external alarm	Alarm output ON; Other outputs OFF.

11.1 SILENCING BUZZER

Once the alarm signal is detected the buzzer can be disabled by pressing any key. The display signal remains as long as the alarm condition remains.

11.2 ALARM "EE"

The instruments in the Dixell range are provided with an internal check verifying data integrity. Alarm "EE" flashes when a failure in the internal memory is detected. In such case the alarm output enabled.

WHAT TO DO

1. Cancel the alarm by pressing a key.
2. Check the value of all parameters and restore correct values when wrong.
3. Check the correct instrument operation and in case of further errors call the service.

11.3 REAL TIME CLOCK ALARM (RTC)

The RTC alarm signals a failure in the instrument internal clock. In such case defrosts are controlled by parameters "ldF" and "dPO" and the Function Menu displays label "dFt" shows the time to the next defrost.

11.4 ALARM RESET THROUGH KEYBOARD

It is referred to alarms "EE", "rtC" and "FF". Reset is performed by pressing any key while the alarm is being signalled, then message "rES" is displayed for about 3s before normal operation is restored.

11.5 ALARM RECOVERY

Probe alarms "P1" and "P2" start 30 seconds after the fault in the related probe; they automatically stop 30 seconds after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms "HA" and "LA" automatically stop as soon as the thermostat temperature returns to normal values and when defrost starts. Alarm "FF" automatically stops after 30 minutes.

External alarms "EA", "CA", "OFF" and "dA" stop as soon as the external digital input is disabled.

12. SERIAL OUTPUT RS485

The instrument can be connected, by means of TTL serial outputs, to the external XJ RS485 serial module to interface the instrument with the monitoring and supervising system XJ500.

13. SELF DIAGNOSIS

The device self test can be forced by triggering function "tSt" in the Function Menu. Self test progress:

- 1) Each segment or decimal point is turned on alternatively in all digits (3 segments in parallel);
- 2) All digits in the display are turned on, one by one;
- 3) All digits in the display are turned on simultaneously;
- 4) LEDs are activated, one by one;
- 5) All relays are activated, one by one, for 3s, regardless of configuration;
- 6) Digital input test:
 - if a key is pressed the "Fx" message is displayed (x = number of the key pressed).

- If the digital input is enabled the "In1" message is displayed.

7) All the parameters and their values are displayed in sequence.

Once the self test cycle is over the instrument restores normal operation.

14. TECHNICAL DATA

Housing: self extinguishing ABS.

Case: frontal 32x74 mm; depth 70mm;

Mounting: panel mounting in a 71x29 mm panel cut-out.

Frontal protection: IP65

Connections: Screw terminal block $\leq 2,5\text{mm}^2$ wiring.

Power supply: 12Vac/dc, -10% +15%,

Power absorption: 3VA max.

Display: 3 digits, red LED, 14,2 mm high.

Inputs: 2 PTC probes

Relay outputs compressor: relay SPST 8(3)A, 250Vac, **defrost:** relay 8(3)A, 250Vac

RS485 output: TTL output for external serial module XJRS485

Data storing: on the non-volatile memory (EEPROM).

Operating temperature: $0 \pm 60^\circ\text{C}$,

Storage temperature: $-30 \pm 85^\circ\text{C}$.


Relative humidity: 20÷85% (no condensing)

Measuring range: $-55 \pm 50^\circ\text{C}$

Resolution: $0,1^\circ\text{C}$ or 1°F (selectable).

Accuracy of the controller at 25°C : $\pm 0,3^\circ\text{C} \pm 1$ digit

15. CONNECTIONS

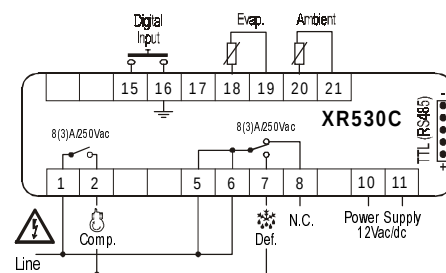

16. DEFAULT SETTING VALUES - STANDARD MODELS

PARAMETER	RANGE	LEVEL	VALUES
Set point	LS÷US	Pr1	-5
Hy	$1 \pm 50^\circ\text{C}$ or $1 \pm 90^\circ\text{F}$	Pr1	2
LS	$-50,0^\circ\text{C} \div \text{Set}$ or $-58^\circ\text{F} \div \text{Set}$	Pr2	-30
US	$\text{Set} \div 50,0^\circ\text{C}$ or $\text{Set} \div 122^\circ\text{F}$	Pr2	20
AC	0÷30 min	Pr2	1
OdS	0÷30 min	Pr2	1
ALC	0=Relative; 1=Absolute	Pr2	0
ALU	with ALC=1: $\text{ALL} \div 50^\circ\text{C} / 122^\circ\text{F}$ with ALC=0: $0 \div 50^\circ\text{C} / 90^\circ\text{F}$	Pr2	10
ALL	with ALC=1: $-50^\circ\text{C} / -58^\circ\text{F} \div \text{ALU}$ with ALC=0: $0 \div 50^\circ\text{C} / 90^\circ\text{F}$	Pr2	10
ALd	0 ÷ 255 min	Pr2	15
dAO	0' ÷ 23h 50'	Pr2	1,30
EdA	0' ÷ 255 min	Pr2	30
CCt	0 ÷ 24 hours	Pr2	4
dAF	0' ÷ 23h e 50'	Pr2	2
IdF	1 ÷ 99 hours	Pr2	6
MdF	0 ÷ 255 min	Pr2	30
SdF	$-30 \pm 30^\circ\text{C}$ or $-22 \pm 86^\circ\text{F}$	Pr2	0
dtE	$-50 \pm 50^\circ\text{C}$ or $-58 \pm 122^\circ\text{F}$	Pr2	8
dFd	0=Real; 1=Start 2=Set; 3=dEF	Pr2	1
dAd	0 ÷ 255 min	Pr2	30
tdF	0=Resistor 1=Hot gas	Pr2	0
EdF	0=Timed 1=Probe 2=SMART	Pr2	1
Fdt	0 ÷ 255 min	Pr2	0
dPO	0=Immediately; 1=after IdF	Pr2	1
Ot	$-30 \pm 30^\circ\text{C}$ or $-54 \pm 54^\circ\text{F}$	Pr2	0
OE	$-30 \pm 30^\circ\text{C}$ or $-54 \pm 54^\circ\text{F}$	Pr2	0
rES	0 = 1°C ; 1 = $0,1^\circ\text{C}$	Pr2	1
CF	0 = $^\circ\text{C}$; 1 = $^\circ\text{F}$	Pr2	0
COOn	0÷255 min	Pr2	15
COF	0÷255 min	Pr2	30
dIC	0=Generic 1=Klixon; 2=Cut-off; 3= External consent	Pr2	0
dId	0÷255 min	Pr2	5
tBA	0=Disable 1=Enable	Pr2	1
Ad1	0÷94	Pr2	0
Ad2	0÷94	Pr2	1
Ptb	---	Pr2	--

REAL TIME CLOCK PARAMETERS

PARAMETER	RANGE	LEVEL	XR530C
Ld1	0.0÷24.0	Pr2	6.0
Ld2	0.0÷24.0	Pr2	13.0
Ld3	0.0÷24.0	Pr2	21.0
Ld4	0.0÷24.0	Pr2	0.0
Ld5	0.0÷24.0	Pr2	0.0
Ld6	0.0÷24.0	Pr2	0.0
Sd1	0.0÷24.0	Pr2	6.0
Sd2	0.0÷24.0	Pr2	13.0
Sd3	0.0÷24.0	Pr2	21.0
Sd4	0.0÷24.0	Pr2	0.0
Sd5	0.0÷24.0	Pr2	0.0
Sd6	0.0÷24.0	Pr2	0.0
ILE	0.0÷24.0	Pr2	0.0
dLE	0÷23	Pr2	0
ISE	0.0÷24.0	Pr2	0.0
dSE	0÷72	Pr2	0
HES	$0 \pm 30^\circ\text{C}$ or $0 \pm 54^\circ\text{C}$	Pr2	0/0
ddd	1÷7	rtC	1
HHH	0÷23	rtC	0
nnn	0÷59	rtC	0

Dixell s.r.l. Z.I. Via dell'Industria, 27
32010 Pieve d'Alpago (BL) ITALY
tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13
E-mail: dixell@dixell.com - <http://www.dixell.com>